


- Determine location of all posts prior to installing deck boards.
- Add blocking where necessary to support proper post installation.
- Insert the composite shims included with your posts under the post base, using a level to make sure your posts are plumb.
- If using standard lag bolts, first pre-drill your holes. and then using 2^{1/2}" lag bolts with washers fasten all hardware through the decking and into the framing structure or blocking to hold it in place.
- Cut or break off the shims.

Use Power lags to avoid having to pre-drill holes for a faster and smoother install

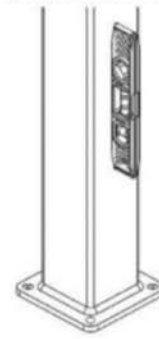

Aluminum Post Installation

- Determine location of all posts prior to installing deck boards.
- Add blocking where necessary to support proper post installation.
- Insert the composite shims included with your posts under the post base, using a level to make sure your posts are plumb.
- If using standard lag bolts, first pre-drill your holes. and then using 2^{1/2}" lag bolts with washers fasten all hardware through the decking and into the framing structure or blocking to hold it in place.
- Cut or break off the shims.

Manufacturer Tip:
Use Power lags to avoid having to pre-drill holes for a faster and smoother install



Aluminum Post Installation

- Determine location of all posts prior to installing deck boards.
- Add blocking where necessary to support proper post installation.
- Insert the composite shims included with your posts under the post base, using a level to make sure your posts are plumb.
- If using standard lag bolts, first pre-drill your holes. and then using 2^{1/2}" lag bolts with washers fasten all hardware through the decking and into the framing structure or blocking to hold it in place.
- Cut or break off the shims.

Manufacturer Tip:
Use Power lags to avoid having to pre-drill holes for a faster and smoother install

