

# OVER THE POST RAIL INSTRUCTIONS

**STOP!**

**CHECK ALL LOCAL BUILDING CODES BEFORE YOU BEGIN!**

QUESTIONS OR CONCERNS?

CALL IN-PERSON M-F 8:00AM TO 5:00 PM CST (888) ARD-RAIL

CONTACT US 24/7 AT [HTTP://ALUMINUMRAILINGDEPOT.COM](http://ALUMINUMRAILINGDEPOT.COM)

## 1 Gather necessary tools before installation (check box)



- Pencil
- Tape measure
- Cordless drill or impact
- Miter saw
- #1 Square bit
- #2 Square bit

**Manufacturer Recommends:**

- 1/2" Drill bit

## 2 Make sure the following components are included (check box)

- 4—Top Drink Rail Brackets
- 4—Sets hardware
- 1—Top Surface  
(sold separately)

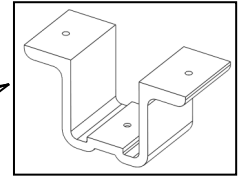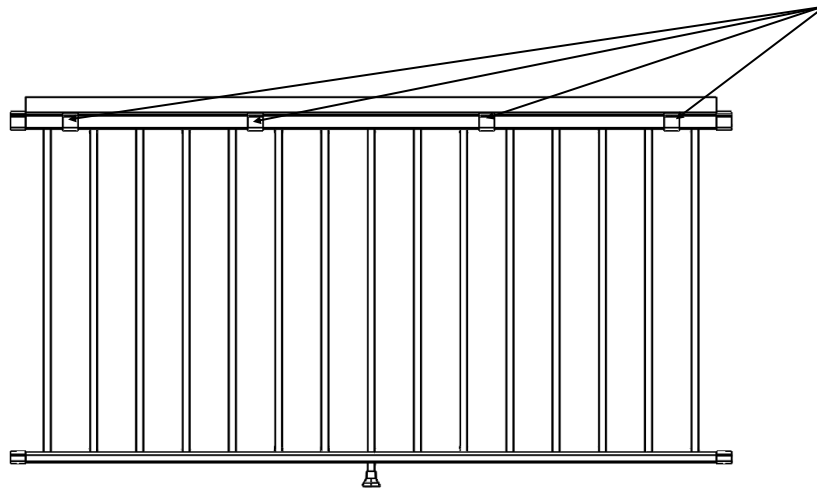


## 3 Cutting Table to Size

- Measure the length between the 2 posts (or desired length of table top)
- Remove the caps off of the top brackets if you would like for the table top to extend over them.
- Measure out the length of the table top surface and cut to length


**Manufacturer Tip:**

Any material can be utilized as a table top to match your desired look. We recommend allowing for ATLEAST 1/2" to 3/4" thickness, minimum for hardware.

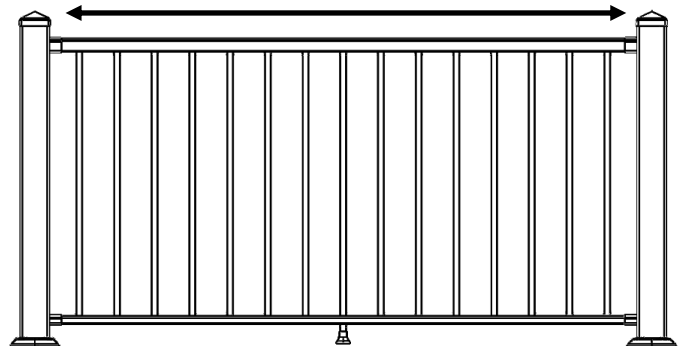

## 4 Locating & Installing Drink Rail Brackets

- *Locate all drink rail brackets and hardware*
- *When installing a 4' drink rail, evenly space 2 brackets*
- *When installing a 6' drink rail, evenly space 3 brackets*
- *When installing a 8' drink rail, evenly space 4 brackets*
- *With the bracket spacing determined, use the provided #3/4" hardware to attach the bracket onto the railing from underneath.*

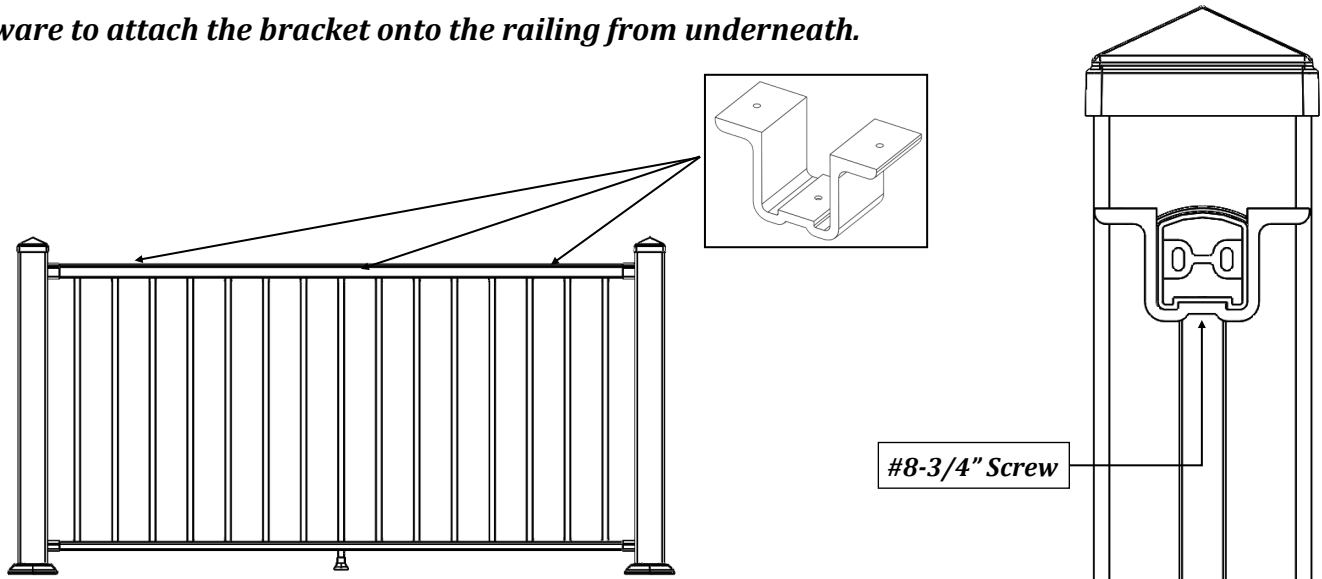

## 5 Attaching Table Top

- *Remember to remove the caps off the top rail if the table top will extend over the brackets*
- *Lay your cut to length table top on top of that drink rail brackets*
- *Position into the desired end location*
- *Mark your drill holes by marking where the bracket holes are*
- *Pre-drill holes onto table top*
- *Mount your table top and attach with the remaining hardware*

